

#### **DATASHEET**

# CC2725AC48TZL Conduction-Cooled, Wide-Output-Range Rectifier

200-240V<sub>AC</sub> Input; 2,725W-Capable; 48V<sub>DC</sub> Default Output; RoHS Compliant



### Description

The CC2725AC48TZL rectifier has an extremely wide programmable output voltage capability. Featuring high-density, fully enclosed, conduction-cooled packaging, it is designed for minimal space utilization and is highly expandable for future growth. This standard rectifier incorporates both RS485 and I<sup>2</sup>C communications buses that allow it to be used in a broad range of applications. Feature-set flexibility makes this rectifier an excellent choice for applications requiring operation over a wide output-voltage range and conduction cooling.

### **Applications**

Applications include: Wide Band Power Amplifier; Broadcast Systems; Lasers; Acoustic Noise Sensitive Systems; LED Signage.

#### **Features**

- Compliant to RoHS Directive 2011/65/EU and amended Directive (EU) 2015/863 (-Z versions)
- Compliant to REACH Directive (EC) No 1907/2006
- Peak efficiency 95%
- Completely enclosed, conduction cooled
- Output constant power 2,725W from 58-50V<sub>DC</sub>
- Output voltage programmable from 30V-58V<sub>DC</sub>
- Remote ON/OFF control of the main output
- Comprehensive input, output and overtempt protection

- Power factor correction (meets EN/IEC 61000-3-2 and EN 60555-2 requirements)
- Redundant, parallel operation with active load Sharing
- Redundant 5V Aux power
- Four front panel LED indicators
- Analog status signals
- Trim port to adjust V<sub>o</sub>
- PMBus®-compliant I<sup>2</sup>C serial bus and RS485
- RoHS 6 compliant



### **Technical Specifications**

### **Absolute Maximum Ratings**

Stresses in excess of the absolute maximum ratings can cause permanent damage to the device. These are absolute stress ratings only, functional operation of the device is not implied at these or any other conditions in excess of those given in the operations sections of the data sheet. Exposure to absolute maximum ratings for extended periods can adversely affect the device reliability.

Parameter	Symbol	Min	Max	Unit
Input Voltage - Continuous Operation	$V_{IN}$	0	264	$V_{AC}$
Operating Case Temperature (sink side)	T <sub>C</sub>	-40¹	40 <sup>2</sup>	°C
Storage Temperature	$T_{stg}$	-40	85	°C

### **Electrical Specifications**

Unless otherwise indicated, specifications apply overall operating input voltage, Vo=48VDC, resistive load, and temperature conditions.

INPUT					
Parameter	Symbol	Min	Тур	Max	Unit
Startup Voltage					
High-line Operation	$V_{IN}$			185	$V_{AC}$
Operating Voltage Range					
High-line configuration	$V_{IN}$	185	200-240	264	$V_{AC}$
Voltage Swell (no damage)	$V_{IN}$	305			$V_{AC}$
Low Voltage					
Turn Off	$V_{IN}$	175			$V_{AC}$
Turn On	$V_{IN}$			185	$V_{AC}$
Hysteresis	V <sub>IN</sub>		10		$V_{AC}$
High Voltage				075	
Turn Off Turn On	V <sub>IN</sub>	265		275	$V_{AC}$
Hysteresis	$V_{IN}$ $V_{IN}$	265	10		$V_{AC}$
Frequency	Fin	47	10	66	Hz
Operating Input Current (185V <sub>ac</sub> , 100% load)	I <sub>IN</sub>			16	A <sub>AC</sub>
Inrush Transient (220V <sub>RMS</sub> , T <sub>C</sub> =25°C, excluding X-Capacitator	I <sub>IN</sub>		25	30	A <sub>PK</sub>
Leakage Current (265V <sub>AC</sub> 60Hz)	I <sub>IN</sub>			3.5	mA
Power Factor (50 - 100% load)	PF	0.96	0.98		
Efficiency, 240V <sub>AC</sub> , 48VDC, T <sub>c</sub> =25°C		0.7	0.5		0.4
20% - 90% of FL	n	93	95		%
Holdup time (output allowed to decay down to 40V <sub>DC</sub> ) w/full	Т		12		ms
Ride through (at 240V <sub>AC</sub> , 25°C, V <sub>o</sub> >40V <sub>DC</sub> with full load)	T	1/2			cycle
Isolation (per EN62368-1) consult factory for testing to this requirement					
Input to Chassis & Signals	V	1500			$V_{AC}$
Input to Output	V	3000			$V_{AC}$



# **Electrical Specifications** (continued)


MAIN OUTPUT					
Parameter Parameter	Symbol	Min	Тур	Max	Unit
Output Power					
@ high line input 200 – 240V <sub>AC</sub> , VO ≥50V <sub>DC</sub> , T <sub>C</sub> ≤40°C	W	2725			W <sub>DC</sub>
Factory set default set point	V <sub>OUT</sub>		48		$V_{DC}$
Overall regulation (load, temperature, aging) 0-Tc≤40°C ,	$V_{OUT}$	-1		+1	%
Output Voltage Set Range	V <sub>OUT</sub>	30		58	$V_{DC}$
Output Current <sup>3</sup> - T <sub>c</sub> ≤40°C 58V 50V 48V 44V Current Share (> 50% FL) V <sub>o</sub> > 42V <sub>DC</sub>	I <sub>ОИТ</sub> IОИТ IОИТ I <sub>ОИТ</sub>	1 1 1 1		75.7 80 85 85	ADC ADC ADC ADC
V <sub>o</sub> < 42V <sub>DC</sub> Output Ripple (20MHz bandwidth, load >1A) RMS (5Hz to 20MHz) Peak-to-peak (5Hz to 20Mhz)	Vouт	-10		100 100 500	%FL mV <sub>rms</sub> mV <sub>p-p</sub>
External Bulk Load Capacitance	Соит	0		5,000	mF
Turn on (monotonic turn-ON from 30 - 100% of Vnom above  Delay Rise Time - PMBus mode Rise Time - RS-485 mode Output Overshoot	T Vout		5 100 100	2	s ms ms
Load Step Response <sup>4</sup> (I start from 0A), V <sub>o</sub> =48V ΔI ΔV Response Time <sup>5</sup>	I <sub>OUT</sub> Vout T		2.0 2	90	%FL V <sub>DC</sub> ms
Overvoltage 200ms delayed shutdown Immediate shutdown	Vоит	>60		<65	V <sub>DC</sub>
Latched shutdown	Three restart at	tempts are ir	mplement	ed with a 1	-minutes
Overtemperature warning (prior to commencement of			5		
Shutdown (below the max device rating being	Т		20		°C
Restart attempts Hysteresis (below shutdown level)			10		
Isolation Output to Chassis	V	100			$V_{DC}$



### **Electrical Specifications (continued)**

MAIN OUTPUT (continued)					
Parameter	Symbol	Min	Тур	Max	Unit
Power limit down to 50V <sub>DC</sub>	Роит	2725			W

- l. Dynamic Current limit threshold varies corresponding Vo set point and Vin
- 2. The overload current limit threshold is set at least > 1% above the load envelope shown here
- Overcurrent events that exceed the envelope by 2% will hiccup continuously at a frequency of approximately once every 24 seconds
- 4. Dynamic output UV protection Vo, set -2V is introduced when Vo set is <42V
- 5. Fixed output UV protection 36V when Vo set >42V

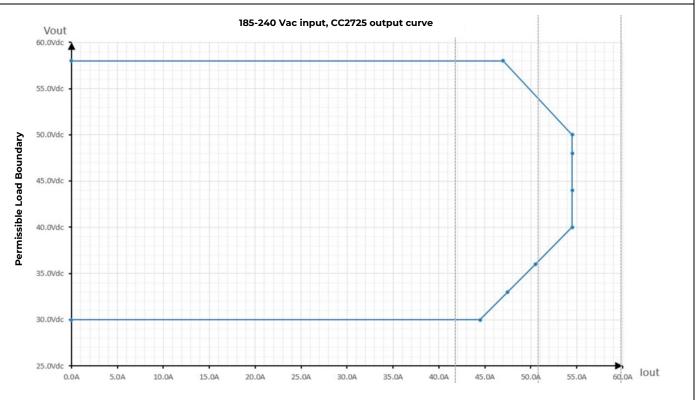

ŀ	185-240Vac input								
	Vo (V <sub>dc</sub> )	30	33	36	40	44	48	50	58
	Io (A)	44.5	47.5	50.5	54.5	54.5	54.5	54.5	47

Define Po curve at case temp 40°C. Ambient temp is less than 30°C.

Contract terms are for supporting all loads inside the load map. The customer will develop a control interface which maintains the operating voltage and current so as to not exceed the load map.


System power up: Upon insertion, the rectifier will delay an overload shutdown for 20 seconds.



### **Electrical Specifications** (continued)

MAIN OUTPUT (continued)					
Parameter	Symbol	Min	Тур	Max	Unit
Power limit down to 50V <sub>DC</sub>	Роит	2725			W

- I. Dynamic Current limit threshold varies corresponding Vo set point and Vin
- 2. The overload current limit threshold is set at least > 1% above the load envelope shown here
- Overcurrent events that exceed the envelope by 2% will hiccup continuously at a frequency of approximately once every 24 seconds
- 4. Dynamic output UV protection Vo, set -2V is introduced when Vo set is <42V
- 5. Fixed output UV protection 36V when Vo set >42V

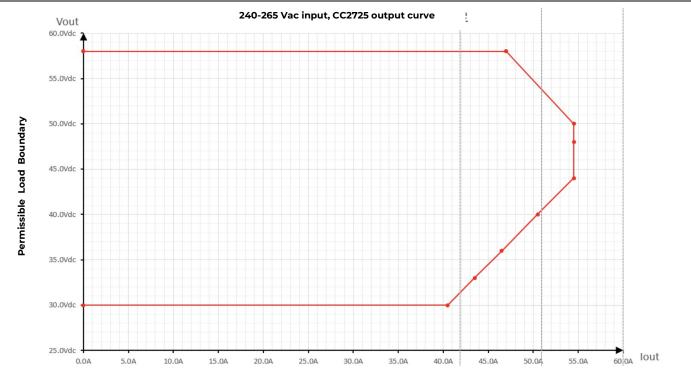

240 - 265Vac input									
	Vo (V <sub>dc</sub> )	30	33	36	40	44	48	50	58
	Io (A)	40.5	43.5	46.5	50.5	54.5	54.5	54.5	47

Define Po curve at case temp  $40^{\circ}$ C. Ambient temp is less than  $30^{\circ}$ C.

Contract terms are for supporting all loads inside the load map. The customer will develop a control interface which maintains the operating voltage and current so as to not exceed the load map.

System power up: Upon insertion, the rectifier will delay an overload shutdown for 20 seconds.



# **Electrical Specifications** (continued)

5V <sub>DC</sub> Auxiliary Output (return is LGND)					
Parameter	Symbol	Min	Тур	Max	Unit
Output Voltage Setpoint	V <sub>OUT</sub>		5		$V_{DC}$
Overall Regulation		-10		+5	%
Output Current		0		0.2	Α
Ripple and Noise (20mHz bandwidth)			55	200	mV <sub>p-p</sub>
Over-voltage Clamp				7	$V_{DC}$
Overcurrent Limit		400		670	%FL
Isolation LGND to Chassis		100			$V_{DC}$

The  $5V_{DC}$ should be ON before availability of the  $48_{DC}$ main output and should turn OFF only if insufficient input voltage exists to provide reliable  $5V_{DC}$ power. The PG# signal should have indicated a warning that main output has turned OFF and the  $48V_{DC}$  main output should be OFF way before interruption of the  $5V_{DC}$  output.

### **General Specifications**

Parameter	Min	Тур	Max	Units	Notes	
Reliability		TBD		Hours	Full load, 25°C, MTBF per SR232 Reliability protection for electronic equipment, issue 2, method I, case III	
Service Life		10		Years	At 80% load and 25°C cold plate	
Unpacked Weight		TBD		Kg		
Packed Weight		TBD		Kg		
Heat Dissipation		TBD Watts or TBD BTUs @ 80% load, TBD Watts or TBD BTUs @ 100% load				



### **Signal Specifications**

Unless otherwise indicated, specifications apply to overall operating input voltage, resistive load, and temperature conditions. Signals are referenced to LGND unless noted otherwise.

Parameter	Symbol	Min	Тур	Max	Unit
ON/OFF					
Main Output OFF	V <sub>OUT</sub>	0.7V <sub>p-p</sub>		5	$V_{DC}$
Main Output ON (should be connected to LGND)	Vout	0		0.5	V <sub>DC</sub>
Margining (by adjusting "Margining"; see "Voltage					
Programmed output voltage range	V <sub>OUT</sub>	30		58	$V_{DC}$
Linear voltage control range	$V_{control}$	≥ 0.1	TBD	≥ 3.0	$V_{DC}$
Voltage adjustment resolution (8-bit A/D)	V <sub>contro</sub>				$mV_{DC}$
Output set to 48V <sub>DC</sub>	$V_{contro}$	3.1		3.3	$V_{DC}$
Output set to 30V <sub>DC</sub>	$V_{contro}$	0		0.1	$V_{DC}$
Over Temperature Warning (OTW)					
Logic Hi (temperature normal)	V	0.7V <sub>p-p</sub>		TBD	$V_{DC}$
Sink current (note: open collector output FET)	1			5	mA
Logic LO (temperature is too high)	V	0		0.4	$V_{DC}$
Fault					
Logic Hi (temperature normal)	V			TBD	$V_{DC}$
Sink current (note: open collector output FET)	1			5	mA
Logic LO (internal fault occurred)	V			0.4	$V_{DC}$
Power Good Warning (PG)					
Logic Hi (output temperature normal)	V	0.7V <sub>p-p</sub>		TBD	$V_{DC}$
Sink current (note: open collector output FET)	1			5	mA
Logic LO (until shutdown, temperature is too high)	V	0		0.4	mA

### **Environmental Specifications**

Parameter	Min	Тур	Max	Units	Notes
Operating Case Temperature	-40 <sup>5</sup>		40	°C	Measured at the center of the cooling surface.
remperature					Refer to detailed power boundary curves.
Storage Temperature	-40		85	$^{\circ}$	
Operating Altitude			5000/16,463	m/ft	
Non-operating Altitude			8200/27,000	m/ft	
Over Temperature		TBD		°C	Shutdown/restart (internally
Humidity					
Operating	5		95	%	Relative humidity, non-condensing
Storage	5		95	%	
Shock and Vibration			2.4	Grms	



#### **EMC**

Parameter	Measurement	Standard	Level	Test	
	Conducted emissions	EN55032	A +3dB margin	0.15 - 30MHz	
AC Input	Radiated emissions <sup>[2]</sup>	EN55032	A +3dB margin	30 - 1000MHz	
	Line harmonics	EN610000-3-2 THD	Table 15%	0 - 2kHz 230 Vac, full load, 25°C	
Parameter	Measurement	Standard	Criteria <sup>6</sup>	Test	
			8	-30%, 10ms	
	Line sags and interruptions	EN610000-4-11	8	-60%, 100ms	
			8	-100%, 5sec	
AC Input Immunity		sag must be higher than 80Vrms, Vo>40Vdc with full load	А	25% line sag for 2 seconds 0.5 cycle interruption	
	Lindataina	EN610000-4-5, Level 4,	А	4kV, common mode	
	Lightning surge	1.2/50ms - error free	А	2kV, differential mode	
	Fast transients	EN610000-4-4, Level 3	В	5/50ns, 2kV (common mode)	
Enclosure Immunity	ESD	EN610000-4-2, Level 4	В	8kV contact, 15kV air	

#### Footnotes:

 $<sup>\</sup>ensuremath{^{\circ \circ}}$  ISO is a registered trademark of the International Organization of Standards

<sup>&</sup>lt;sup>1</sup> Designed to start and work at an ambient as low as -40°C, but meet operational limits until above -5°C

<sup>&</sup>lt;sup>2</sup> Refer to power curve (Vo vs Io)

 $<sup>^{\</sup>rm 3}$  Refer to power boundary curves for details

<sup>&</sup>lt;sup>4</sup>Allow to add ext Co bank

 $<sup>^5</sup>$  Designed to start and work at an ambient as low as -40  $^\circ$ C, but meets operational limits until about -5  $^\circ$ C

<sup>[2]</sup> Test with external filter

<sup>&</sup>lt;sup>6</sup> Criteria A: The product must maintain performance within specification limits. Criteria B: Temporary degradation which is self-recoverable. Criteria C: Temporary degradation which requires operator intervention.



#### **Control and Status**

The Rectifier provides three means for monitor control: analog, PMBus®, or the OmniOn Galaxy-based RS485 protocol. Details of analog control are provided in this data sheet. OmniOn will provide separate application notes on the Galaxy RS485 or PMBus® based protocol for users to interface to the rectifier. Contact your local OmniOn representative for details.

Factory default setting is Analog & PMBus® mode.

#### **Analog Controls**

Details of analog controls are provided in this data sheet under Feature Specifications. Note that some signals are ignored in RS485 mode.

#### Signal Reference

Unless otherwise noted, all signals are referenced to LGND ("Logic Ground"). See the Signal Definitions Table at the end of this document for further description of all the signals.

LGND is isolated from the main output of the rectifier for PMBus communications. Communications and the 5V standby output are not connected to main power return (Vout (-)) and can be tied to the system digital ground point selected by the user. (Note that RS485 communications is referenced to Vout (-), main power return of the rectifier).

LGND is capacitively coupled to Earth Ground inside the rectifier where Earth Ground is also wired to the metal case). The maximum voltage differential between LGND and Earth Ground should be less than 100V<sub>DC</sub>.

#### **Delayed Overcurrent Shutdown During Startup**

Rectifiers are programmed to stay in a constant current state for up to 20 seconds during power up. This delay has been introduced to permit the orderly application of input power to a subset of paralleled front-ends during power up. If the overload persists beyond the 20 second delay, rectifier will shut down and restart.

#### **Auto Restart**

Auto-restart is the default configuration for over-current and over-temperature shutdowns

An overvoltage shutdown is followed by three attempted restarts, each restart delayed 1 second, within a 1 minute window. If within the 1 minute window three attempted restarts failed, the unit will

latch OFF. If within the 1 minute less than 3 shutdowns occurred then the count for latch OFF resets and the 1 minute window starts all over again.

To restart after a latch off either of five restart mechanisms are available.

- 1. The hardware pin ON/OFF or DIP switch on rear side may be cycled OFF and then ON.
- 2. Turn OFF and then turn ON AC power to the unit.
- The unit may be commanded to restart via i2c through the Operation command by cycling the output OFF followed by ON.

#### **Control Signals**

There are two DIP switches and a port on rear side of rectifier, to provide way to adjust output voltage setpoint and remote on/off main power output.

A separated signal connector includes all the control and status signals.

#### Protocol

Establishes the communications mode of the rectifier, between analog/I $_2$ C and RS485 modes. For RS485, connect 10k $\Omega$  pull-down resistor to V $_{out}$  (-). Default setting of signal interface is open.

#### Margining


There is a trim port on rear panel of rectifier to provide an easy to adjust output voltage set-point. A DIP switch in off disable this trim pot when need to use external analog signal to adjust Vo through margin pin.

Output voltage set-point will return to factory default set-point once DIP switch for trim pot is off.

Factory default setting is switch on.

The margining pin from signal interface can also be used to adjust the output voltage set-pint once DIP is off

The margining pin is connected to  $3.3V_{dc}$  via a  $8.87k\Omega$  resistor inside the Rectifier. Connecting a resistor or voltage source externally can change set-point.

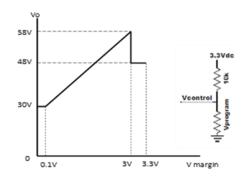



#### Margining (continued)

Note that in RS485 mode the margining function include trim port and DIP switch is ignored.

Please contact your local representative for details about how to change output voltage set-point through RS485 communication.

#### ON/OFF

There is an on/off DIP switch on rear panel of rectifier to provide on/off main power output manually.

Factory default setting is switch on.

Enable pin from signal interface can be used to control main power on/off in case on/off DIP switch is off. This pin must be pulled low to turn ON the rectifier.

Note that in RS485 mode the ON/OFF pin is ignored.

#### Enable\_RS485

This pin is used as main power on/off in RS485 mode. In I<sup>2</sup>C/ analog mode, this pin is ignored.

#### **Status Signals**

#### Power Good Warning (PG)

A TTL-compatible status signal representing whether main output is delivered. This signal needs to be pulled HI externally through a resistor.

This signal is HI when the main output is being delivered and goes LO when main power is shutdown. This signal deliver duty in case output current limit condition.

#### Fault

A TTL-compatible status signal representing whether a internal Fault occurred. This signal needs to be pulled HI externally through a resistor.

This signal goes LO for any failure that requires rectifier replacement. These faults may be due to:

- Over-temperature shutdown
- Over-voltage shutdown
- Internal Rectifier Fault

In RS485 mode, this pin is ignored.

#### Over Temp Warning (OTW#)


A TTL-compatible status signal representing whether an over temperature exists. This signal needs to be pulled HI externally through a resistor.

If an over temperature should occur, this signal would pull LO for approximately 10 seconds prior to shutting down the rectifier. In its default configuration, the unit would restart if internal temperatures recover within normal operational levels. At that time the signal reverts back to its open collector (HI) state.

In RS485 mode, this pin ignored.



#### **Front Panel LEDs**

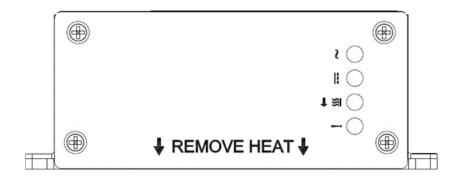

	Analog Mode	I <sup>2</sup> C Mode	RS485 Mode
□~	•	ON: Input ok Blinking: Input out of limits	
	•	ON: Output ok Blinking: Overload	
□ <u>∭</u> *	ON: Over-temperature Warning	ON: Over-temperature Warning Blinking: Service	ON: Over-temperature Warning
_ !	←	ON: Fault	ON: Fault Blinking: Not communicating

<sup>\*</sup>Arrow next to "hot" symbol points to the cooling side, where heat should be removed.


	Rectifier LED State				Monitoring Signals		
Condition	AC OK Green	DC OK Green	Service Amber	Fault Red	Fault	отw	PG
ок	1	1	0	0	HI	HI	HI
Thermal Alarm (5°C before	1	1	1	0	HI	LO	НІ
Thermal Shutdown	1	0	1	1	LO	LO	LO
AC Present But Not Within Limits	Blinks	0	0	0	HI	НІ	LO
AC Not Present <sup>1</sup>	0	0	0	0	HI	HI	LO
Boost Stage Failure	1	0	0	1	LO	НІ	LO
Overvoltage Latched Shutdown	1	0	0	1	LO	HI	LO
Over Current	1	Blinks	0	0	HI	HI	Pulsing <sup>4</sup>
Non-catastrophic Internal Failure <sup>2</sup>	1	1	0	1	LO	HI	HI
Standby Remote⁵	1	0	0	0	HI	HI	LO
Service Request (PMBus Mode)	1	1	Blinks	0	HI	HI	HI
Communications Fault (RS485	1	1	0	Blinks	N/A	N/A	High

- 1. This signal is correct if another powered units provides 5VA and 8VINT as back-bias.
- 2. Any detectable fault condition that does not cause a shutting down. For example, ORing FET failure, boost section out of regulation, etc.
- 4. Pulsing at a duty cycle of 1ms as long as the unit is in overload.
- $5. \ \ Remote on/off, or \ I^2C \ command \ in \ i2c \ mode. or through \ interlock \ or \ GP \ command \ in \ RS485 \ mode.$




### **Mechanical Outline**

All dimensions are in mm

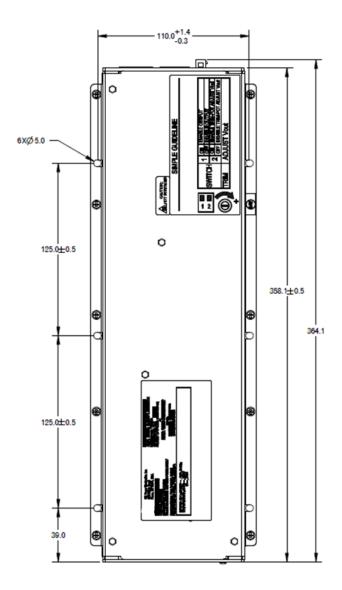


**TOP VIEW** 

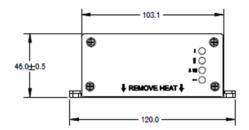

# **FRONT VIEW**



### **Wiring Interface**

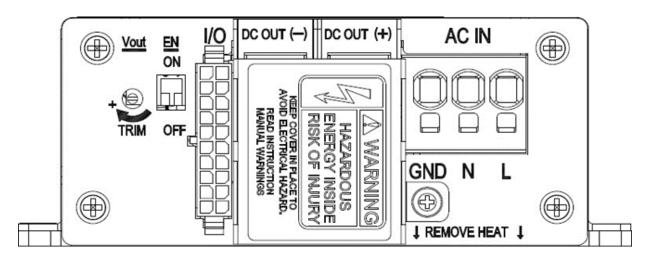

**Rear View** 

### **AC Input Wiring Diagram**



Whether it's a push-in spring or a leg spring, the spring principle makes for quick, tool-free conductor connection. Simply insert the solid conductors and conductors with ferrules into the push-in terminal point and release using a screwdriver. When connecting and releasing finely stranded conductors without ferrules, the terminal point can also be opened using a screwdriver.

### **Input, Output TBs and Signal Connector Information**

TB/Connector	Vendor P/N	Rated Current	Rated Insulation Voltage	Pitch	Pos.
AC Input	1719202 (Phoenix)	41A	1000V	7.5mm	3
DC Output	1735781 (Phoenix)	76A	1000V	10.0mm	2
Signal I/O	430202000 (Molex)	5A (UL)	350V (UL)	3.0mm	20

TB Connection Data	AC Input TB	DC Ouput TB
Conductor cross section solid	0.2 ~ 10mm²	0.75 ~ 16mm²
Conductor cross section flexible	0.2 ~ 6mm²	0.75 ~ 16mm²
Conductor cross section with ferrule without plastic	0.25 ~ 6mm <sup>2</sup>	0.75 ~ 16mm²
Conductor cross section with ferrule with plastic sleeve	0.25 ~ 4mm <sup>2</sup>	0.75 ~ 10mm²
Conductor cross section AWG	24-8 AWG	24-4 AWG
Nominal current IN	41A	76A
Stripping length	15mm	18mm

### Wire Information for TBs



### Signal I/O Pin Definition



PIN No.	DEF
1	SCL0
2	SDA0
3	PFW
4	INTo
5	ENABLE
6	5VA
7	OTW
8	MARGIN
9	FAULT_IO
10	LGND
11	RS485+
12	RS485-
13	ISHARE
14	ENABLE_RS485
15	UNIT_ADDR
16	8V_BUS
17	PROTOCOL_PGMDSP
18	SHELF_ADDR
19	VO-
20	N/A

Pins Table

### **Signal Definitions**

1/0	Function	Туре	Description
5VA	Standby Power	Output	5V provided for external use; return is LGND
Fault#	Rectifier Fault	Output	An open drain FET; normal is High, Changes to Low if internal fault
Ishare	Current Share	Bi-Direct	A single wire active-current-share interconnect between rectifiers. Ref: $V_{\text{out}}$ (-)
LGND	Logic Ground	Input	Return for all signals unless V <sub>out</sub> (-) is indicated in description
Enable	Output Control	Input	If shorted to LGND, main output is ON in Analog or PMBus mode.  Active in case ON/OFF DIP switch is off status. Ref: LGND
OTW#	Over- Temperature Warning	Output	Open drain FET; normally HI, changes to low approximately 5oC prior to thermal shutdown. Ref: LGND
PG#	Power Good Warning	Output	Open drain FET; normally HI, changes to low if an imminent loss of the main output may occur. Ref: LGND
Protocol	Protocol Select	Input	Selects communications mode. No-connect for Analog/PMBus; 10k for RS485. Ref: V <sub>out</sub> (-)
RS_485+	RS485 Line	Bi-direct	RS485 line + Ref: V <sub>out</sub> (-)
RS_485-	RS485 Line	Bi-direct	RS485 line - Ref: V <sub>out</sub> (-)
Margining	Margin	Input	Allow changing of output voltage through an analog input or via resistor divider; active when ON/OFF DIP switch is off status. Ref: LGND
Rectifier Address	Unit_addr	Input	I <sup>2</sup> C/RS485 address setting. Ref: V <sub>out</sub> (-)
Shelf Address	Shelf_addr	Input	I <sup>2</sup> C/RS485 address setting. Ref: V <sub>out</sub> (-)
SCL	SCL	Input	I <sup>2</sup> C 0 channel
SDA	SDA	Input	I <sup>2</sup> C 0 channel
Alert	Interrupt	Output	I <sup>2</sup> C 0 channel
8V_INT		Output	Back Bias
Enable_RS485		Input	On/Off in RS485 mode
V <sub>out</sub> (-)			Ref for Is hare, RS485 +/-, Unit/Shelf addr, 8V_INT


All hardware alarm signals (Fault, PG, OTW) are open drain FETs. These signals need to be pulled HI to either 3.3V or 5V. Maximum sink current 5mA. An active LO signal (< 0.4V<sub>DC</sub>) state. All signals are referenced to LGND unless otherwise stated.


In main output in series to extend Vo application, all signals refer to LGND from different units could be tied together. Other signals refer to V<sub>out</sub>(-) from different units can't be tied together, otherwise may cause internal circuits damage due to different V<sub>ουτ</sub>(-) level.



In main output in series to extend Vo application, all signals refer to LGND from different units could be tied together. Other signals refer to Vout (-) from different units can NOT be tied together, otherwise may cause internal circuits damage due to different Vout (-) level.

### **DIP Switch and Vo Adjustment**

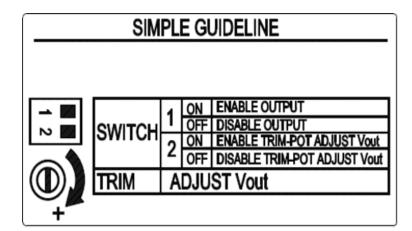

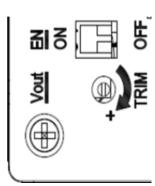


Guideline label on top

**Rear View** 

### **Mounting Dimensions**


All dimensions are in mm

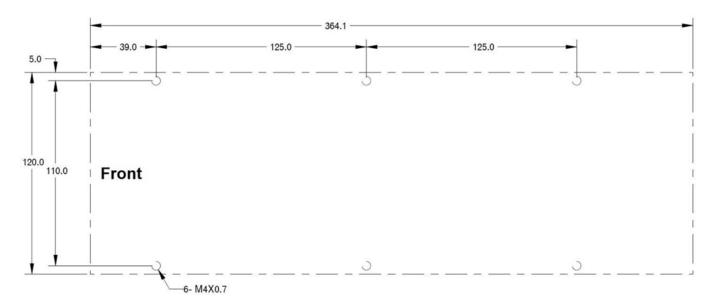




### **Mounting Diagram**

Install the module to cold plate/heatsink with 6 M4 pan head screw as shown, the torque to be 1.5Nm. Apply gap filler, Laird T-putty 504, or equivalent material (thermal conductivity better than 1.8 W/mK), between module and cold plate/heatsink. Amount of Gap filler is around 20.9 cubic cm, thickness is around 0.5mm.

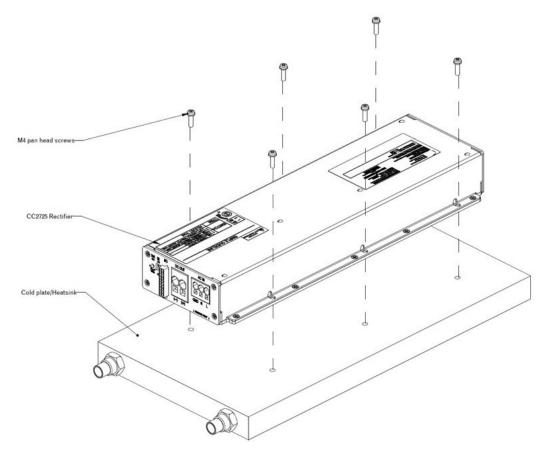

### **Case Temperature Monitoring Location**

Below diagram indicates the hot spots of CC2725AC48TZL rectifier, they are assumed as case temperature of cold plate/heatsink as well. In application, over temperature protection will be enabled if one of the hot spots the temperature is exceeded the operating temperature.

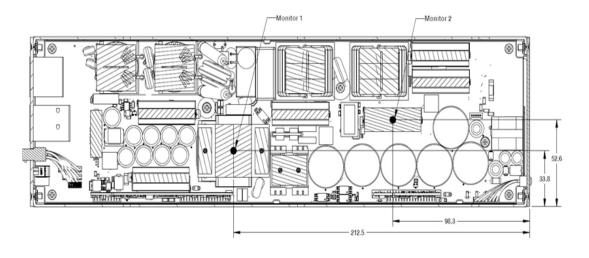





### **Ordering Information**

Please contact your OmniOn Sales Representative for pricing, availability and optional features.

ltem	Description	Ordering Code
CC2725AC48TZL	Conduction cooled, 28~58V <sub>dc</sub> output, shorter length rectifier, 2725W	1600190297A



# **Change History (excludes grammar & clarifications)**

Revision	Date	Description of the change
2.3	11/19/2021	Updated as per template
2.4	07/02/2023	Missed content added on page no 11
2.5	11/02/2023	Updated as per OmniOn template



#### **OmniOn Power Inc.**

601 Shiloh Rd. Plano, TX USA

omnionpower.com

We reserve the right to make technical changes or modify the contents of this document without prior notice. OmniOn Power does not accept any responsibility for errors or lack of information in this document and makes no warranty with respect to and assumes no liability as a result of any use of information in this document. We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of OmniOn Power. This document does not convey license to any patent or any intellectual property right. Copyright© 2023 OmniOn Power Inc. All rights reserved.